


## Trigonox 101-SC8B

2,5-Dimethyl-2,5-di(tert-butylperoxy)hexane, gum in silicone rubber

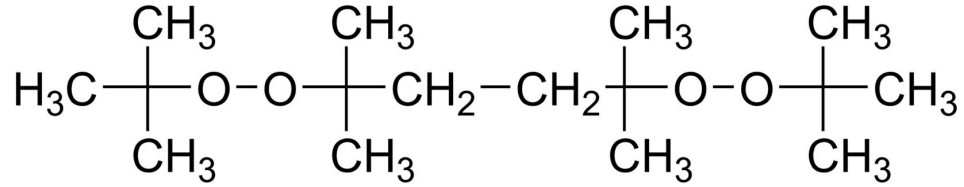

Trigonox 101-SC8B is a bifunctional peroxide formulation which is mainly used for the crosslinking of silicone rubbers.

**CAS number**

78-63-7; 68083-18-1

**EINECS/ELINCS No.**

201-128-1; not listed

**TSCA status**

listed on inventory

**Molecular weight**

290.4

**Active oxygen content  
peroxide**

11.02%

## Applications

Trigonox 101- SC8B is mainly used for the crosslinking of silicone rubbers. Rubber compounds containing Trigonox 101- SC8B have excellent scorch safety. Safe processing temperature: 135°C (rheometer ts2 > 20 minutes). Typical crosslinking temperature: 175°C (rheometer t90 about 12 minutes).

## Thermal stability

Organic peroxides are thermally unstable substances, which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition of a substance in the original packaging may occur is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

|        |  |
|--------|--|
| SADT   | 80°C   |
| Method | The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva). |

## Storage

Due to the relatively unstable nature of organic peroxides a loss of quality can be detected over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (Ts max.) for each organic peroxide product.

|         |  |
|---------|--|
| Ts Max. | 30°C   |
| Note    | When stored under these recommended storage conditions, Trigonox 101- SC8B will remain within the Nouryon specifications for a period of at least six months after delivery. |

## Packaging and transport

The standard packaging is a 20 l plastic pail with 18 kg peroxide. Both packaging and transport meet the international regulations. For the availability of other packed quantities contact your Nouryon representative. Trigonox 101- SC8B is classified as Organic peroxide type E; solid, Division 5.2; UN 3108.

## Safety and handling

Keep containers tightly closed. Store and handle Trigonox 101- SC8B in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e.g. amines), acids, alkalis and heavy metal compounds (e.g. accelerators, driers and metal soaps). Please refer to the Material Safety Data Sheet (MSDS) for further information on the safe storage, use and handling of Trigonox 101- SC8B. This information should be thoroughly reviewed prior to acceptance of this product.

## Major decomposition products

Methane, Ethane, Acetone, tert-Butanol, tert-Amyl alcohol

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox is a registered trademark of Nouryon Functional Chemicals B.V. or affiliates in one or more territories.

## Contact Us

Europe, Middle East, India and Africa  
[polymerchemistry.nl@nouryon.com](mailto:polymerchemistry.nl@nouryon.com)

Asia Pacific  
[polymerchemistry.ap@nouryon.com](mailto:polymerchemistry.ap@nouryon.com)

Americas  
[polymerchemistry.na@nouryon.com](mailto:polymerchemistry.na@nouryon.com)

The Nouryon logo consists of a stylized orange 'N' followed by the word 'ouryon' in a lowercase, orange, sans-serif font.